

The Paisley Drive Deluxe allows you to order the internal effects in either way, or even separate them - if you are using an external looper pedal, you can control them independently.

If you have them wired one way and don't have the switch in the right direction, the pedal will not operate properly, so please make sure you have checked and double checked if only one channel appears to be working!



Channel 1 into 2
Input: Channel 1
Output: Channel 2
Switch: 2 → 1



Channel 2 into 1
Input: Channel 2
Output: Channel 1
Switch: 1 → 2



Separate ins and outs
Input: Both
Output: Both
Switch: Separate