

WAMPLER Pedals Limited Warranty. WAMPLER offers a 5 year warranty to the original purchaser that this WAMPLER product will be free from defects in material and workmanship. A dated sales receipt will establish coverage under this warranty. This warranty does not cover service or parts to repair damage caused by accident, neglect, normal cosmetic wear, disaster, misuse, abuse, negligence, inadequate packing or shipping procedures and service, repair or modifications to the product, which have not been authorized by WAMPLER. If this product is defective in materials or workmanship as warranted above, your sole remedy shall be repair replacement as provided below.

RETURN PROCEDURES In the unlikely event that a defect should occur, follow the procedure outlined below. Defective products must be shipped, together with a dated sales receipt, freight pre-paid and insured directly to WAMPLER SERVICE DEPT - 5300 Harbor Street, Commerce, CA 90040, USA. A Return Authorization Number must be obtained from our Customer Service Department prior to shipping the product. Products must be shipped in their original packaging or its equivalent; in any case, the risk of loss or damage in transit is to be borne by the purchaser. The Returns Authorization Number must appear in large print directly below the shipping address. Always include a brief description of the defect, along with your correct return address and telephone number. When emailing to enquire about a returned product, always refer to the Return Authorization Number. If WAMPLER determines that the unit was defective in materials or workmanship at any time during the warranty period, WAMPLER has the option of repairing or replacing the product at no additional charge, except as set forth below. All replaced parts become a property of WAMPLER. Products replaced or repaired under this warranty will be returned via ground shipping within the United States freight prepaid. WAMPLER is not responsible for costs associated with expedited shipping, either to WAMPLER or the return of the product to the customer.

INCIDENTAL OR CONSEQUENTIAL DAMAGE In no event is WAMPLER liable for any incident or consequential damages arising out of the use or inability of the possibility of such damages, or any other claim by any other party. Some states do not allow the seclusion or limitation of consequential damages, so the above limitation and exclusion may not apply to you.

This warranty gives you specific legal rights and you may also have other rights which may vary from state to state.

FOR YOUR PROTECTION Please complete the online warranty registration within (10) ten days of the date of purchase so that we may contact you directly in the event of a safety notification issued in accordance with the 1972 Consumer Product Safety Act.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and the receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio/TV technician for help.
- Changes or modifications not expressly approved by the party responsible for compliance could void the user's warranty to operate the equipment.

CUSTOMER SUPPORT Our dedicated staff are ready to help you with any warranty or product questions - please email us at help@wamplerpedals.com or call us on **(765) 352-8626**. Please remember to register your pedal as soon as possible after purchase at the following web page to ensure quicker service if you should ever need to make a warranty claim:

wamplerpedals.com/warranty-registration



WAMPLER[®]
BUILT IN USA

PANTHEON DELUXE
Quick Reference Guide

PANTHEON

DUAL OVERDRIVE DELUXE

A highly configurable dual overdrive pedal with two stackable independent MIDI switchable channels: Channel 1 delivers a classic Blues Breaker tone; Channel 2 is a recreation of the original Pantheon, a similar circuit to the Blues Breaker but with a modern boutique feel.

Volume: Controls the total output volume of each channel.

Gain: Turning this control clockwise will increase the amount of gain applied to the signal path of each channel.

Bass / Treble: Adjust the amount of low-end / high-end frequencies, turning clockwise will increase the levels, counter clockwise to decrease.

Presence: Global Presence control to add sparkle and top end to both channels, start off with this turned all the way counter-clockwise and adjust to suit.

Order: Change the channel stacking order with this switch if you are using only one input and output cable.

Gain Level (Side switches L and R): Set the switch at the top for maximum, middle for medium, and bottom positions for lower gain level settings.

Voicing (Side switches L and R): Set the switch at the top for Hard clipping (Crunchy), bottom for soft clipping (Smooth), and in the middle position to blend both clipping styles.

Connections: This pedal has 2 pairs of input and output jacks: if you are using only one set connect to the jacks marked with solid triangles; if you are using both sets, the outline triangles indicate the separate output for Channel 1 and input for Channel 2. This allows you to connect both channels independently (e.g to a loop switcher), insert a pedal between the channels, or run in stereo.

MIDI: Use either the included 3.5mm to MIDI 5-pin DIN adapter to connect a standard MIDI cable, or if connecting from another pedal that uses 3.5mm TRS audio connectors, use a standard TRS 3.5mm audio cable. To set the MIDI Channel the device will receive commands on (by default the pedal is in omni channel mode):

1. Power off the device, press and hold the Left Footswitch (Channel 2 switch), and power the device on.
2. After power up, releases the switch. Both LEDs will blink.
3. Send a MIDI CC message CC32 with value set to the desired MIDI channel: val=0 is Channel 1, up to val=15 is Channel 16, val=16 is omni. The LEDs will blink in success. *NOTE: This CC message may be sent on any channel.*

Basic MIDI Commands:

CC Function	CC no.	Value (0-127)	Description
Channel 1 on/off State	0	0=off, 1-127=on	Sets the on/off state of Channel 1 (Ch1)
Channel 2 on/off State	1	0=off, 1-127=on	Sets the on/off state of Channel 2 (Ch2)
Ch1 off, Ch2 off	2	any value	Sets Ch1 off and Ch2 off when this command is received
Ch1 on, Ch2 off	3	any value	Sets Ch1 on and Ch2 off when this command is received
Ch1 off, Ch2 on	4	any value	Sets Ch1 off and Ch2 on when this command is received
Ch1 on, Ch2 on	5	any value	Sets Ch1 on and Ch2 on when this command is received

Power: This pedal was designed around the usage of a 9-18V DC power source only. To avoid damage to the pedal, do not exceed 18V DC, do not use center pin positive adapters, and do not use AC power. Use only a 9-18V DC power source that is intended for guitar pedals. This pedal requires 55mA.

NOTE: We recommend disconnecting the battery if this pedal is used with a power supply. If the power supplied is insufficient LEDs may flicker when a foot switch is pressed to indicate this.